

UNI5 Temperature Transmitterfeaturing Smart Transmitter Technology

Installation, Configuration & Operating Instructions

This AST temperature transmitter utilizes INOR's revolutionary IPAQ technology for wireless configuration via the INOR Connect app using Near Field Communication (NFC®) or Bluetooth® modem*.





Download INOR CONNECT:









Scan the QR code for:



- Installation, configuration & operation instructions
- NFC Quick Start guide
- Transmitter datasheet

or navigate to:

http://www.inor.com/download/documentation/

	STAND-ALONE PART	OPTION CODE	INOR CODE
Isolated 4-20	UNI5-S	TR11	C330
HART Output	UNI5-H	TR13	C530

^{*} Sold separately